

Fig. 1.

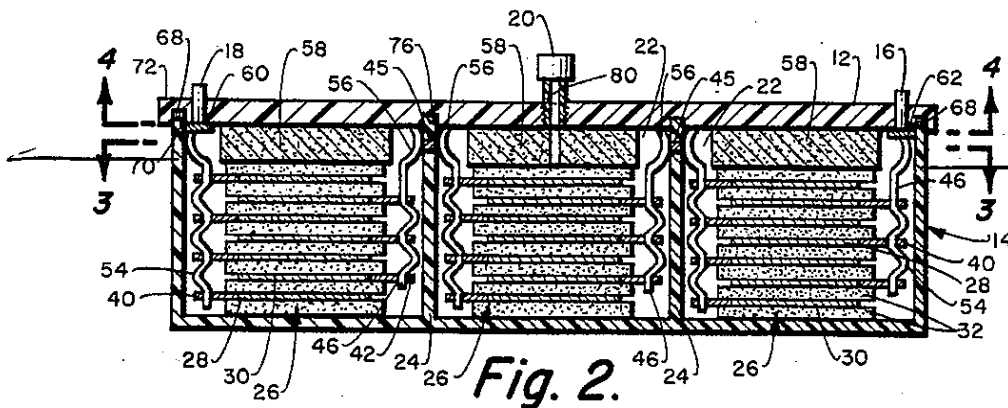


Fig. 2.

compressor height

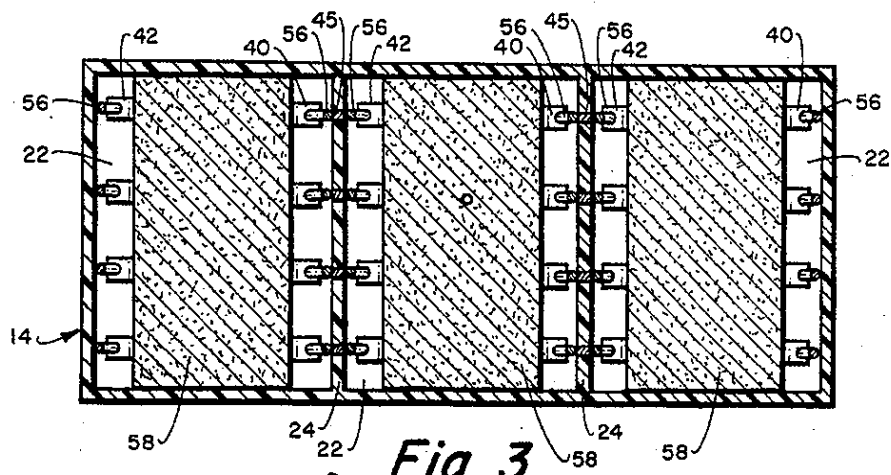


Fig. 3.

openings  
in side wall  
require specific alignment  
of lugs + bus bar

Gregg Cantelmo  
11/6/04

the openings in the sidewalls serve as  
guides for the  
placement of the battery

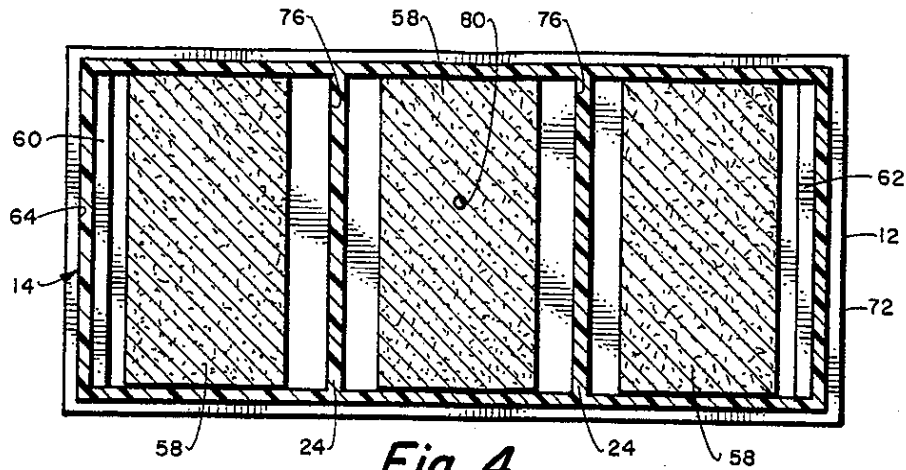


Fig. 4.

Uncompressed  
Stack  
height

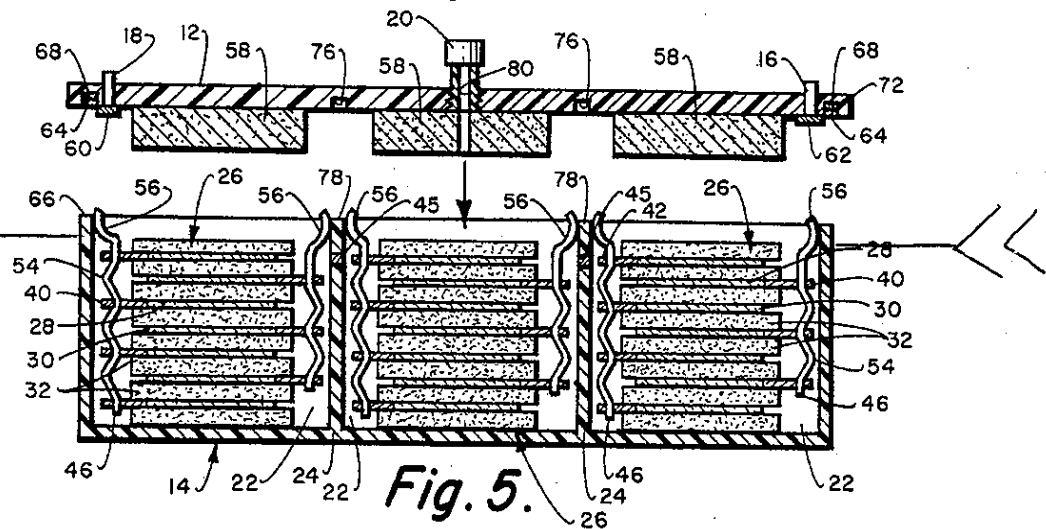


Fig. 5.

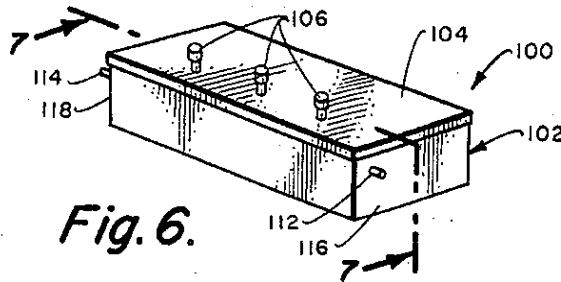


Fig. 6.

Grey Cant 1/6/04